


CRESSI

SINCE 1946



MICHELANGELO DONATELLO QUICK GUIDE

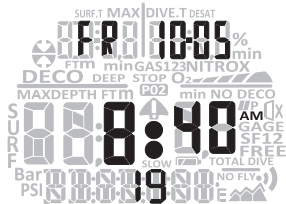

DOWNLOAD THE COMPLETE
CRESSI INSTRUCTION MANUAL
at: www.cressi.com/manuals

LONG LIFE



BATTERY

HIGH CONTRAST



DISPLAY

HIGH POWER



BACKLIGHT

EASY ACCESS




MENU

MULTI MODE

AIR
EAN
GAGE
FREE

Cressi reserves the right to make changes to the instrument without notice, based on the incessant technological upgrade of its components.

OPERATING BUTTONS

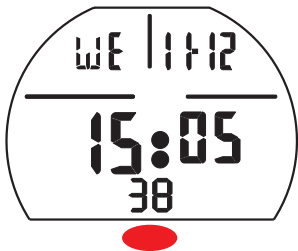

-  Short \ **NEXT (ONE STEP)**
-  Long (1 Sec.) \ **ENTER \ ESC**
-  Long (3 Sec.) \ **RETURN**

SWITCH ON

PUSH  TO SWITCH ON THE COMPUTER

PRE DIVE





PRE DIVE (DESAT)*



THE SCREEN SCROLL AUTOMATICALLY
EVERY TWO SECONDS

* In case of desat time, in mode AIR, FREE, GAGE the computer will alternate the pre dive screen to that of desat screen. In case of desat time in mode NITROX the computer will alternate the pre dive screen to that of GAS screen (DONATELLO) or GAS1/2 (MICHELANGELO).

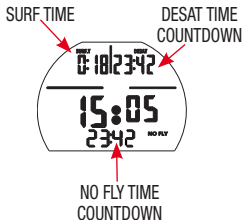

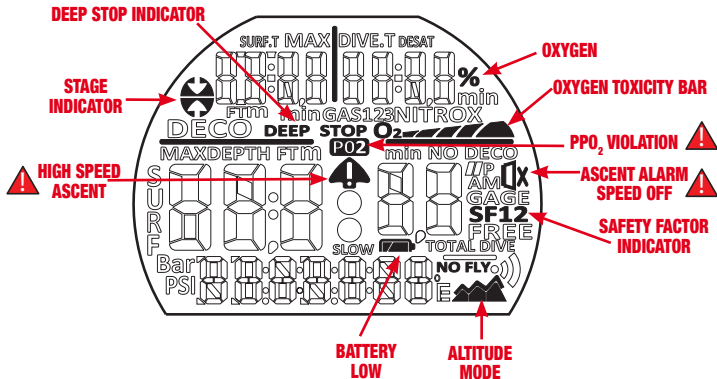


MAIN SURFACE MENU

PRE DIVE




TIME



ENTER

RETURN

MODE SET



ENTER

RETURN

AIR (AIR MODE)


EAN (NITROX MODE)

FREE (APNEA MODE)

GAGE (GAUGE MODE)

Scroll the Mode and confirm

LOGBOOK



ENTER



RETURN



DIVE-SET



ENTER

AIR (AIR MODE)

- Deep stop ON /OFF
- Safety Factor SF 0/1/2
- Altitude ALT 0/1/2/3
- Depth ON/OFF
- PPO₂ 1.2 - 1.6

EAN (NITROX MODE)

- Deep stop ON /OFF
- Safety Factor SF 0/1/2
- Altitude ALT 0/1/2/3
- Depth OFF 50-10 m. (164-30 FT)
- % O₂ 21 - 50% GAS 1
- PPO₂ 1.2 - 1.6 GAS 1
- * % O₂ 21 - 99% GAS 2
- * PPO₂ GAS 2


FREE (APNEA MODE)

- Surf Time Alarm **SURF-T** F1-F5 (surf time factor) /1':00"-10':00"/OFF
- Depth Alarm **DEPTH** 1 - 50 m. (3-164 FT)/OFF
- Step Depth Alarm **STEP** 2 - 25 m. (6-82 FT)/OFF
- Dive Time Alarm **DIVE-T** 0':10"-6':00"/OFF

○ Scroll the Mode
and confirm

RETURN

TIME SET



ENTER



SLEEP ALARM ON/OFF

- SET HOUR
- SET MINUTE
- SET H. 12/24
- SET HOUR
- SET MINUTE
- SET D-M/M-D
- SET DAY or MONTH
- SET MONTH or DAY
- SET YEAR

Scroll the Mode
and confirm

ENTER

Scroll +/-

and confirm

ENTER

RETURN


- SET 2nd TIME ON/OFF

○ Scroll +/- 30 Min.


and confirm

ENTER

PLANNING



ENTER

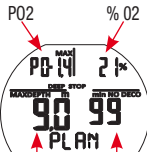

DEPTH

NO DECO
TIME

○ SCROLL FOR INCREASE
THE DEPTH


RETURN

Not available in
FREE MODE / GAGE MODE

* ONLY FOR MICHELANGELO


MAIN SURFACE MENU

PC LINK



CONNECT THE INTERFACE
AND DOWNLOAD LATEST
SOFTWARE
UPDATES

SETTING & INFO SYSTEM



ENTER



SYSTEM MENU

CHANGE UNITS



ENTER

SCROLL TO
CHANGE UNITS

SCROLL FOR
INCREASE THE DEPTH

RETURN

HISTORY




MAX
DEPTH
HISTORY


HOURS
IN USE
COUNTER



INFO

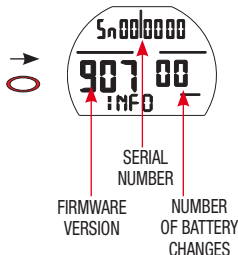

HIGH SPEED ASCENT ALARM

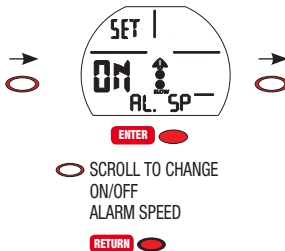


An ascent at too high speed increases the risk of decompression sickness! This function is strictly reserved for instructors who take full responsibility for the disactivation of the high speed ascent alarm (AL.SP).

In any event, when activating this function the computer will show a barred speaker icon during the entire dive.



TISSUE ERASE


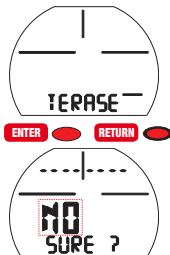


SCROLL TO CHANGE NO / YES, AND PUSH FOR 5 SEC. TO ERASE THE TISSUE




If you decide to erase the tissue nitrogen saturation using the T.ERASE function, the computer will not be able to calculate any successive dives in relation to nitrogen saturation! In any event, do not use this function if 48 hours have not passed since the last dive.

LOGBOOK MENU




AIR (AIR MODE)

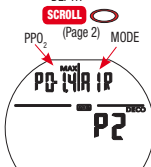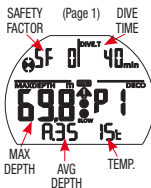



EAN (NITROX MODE)

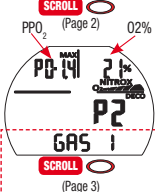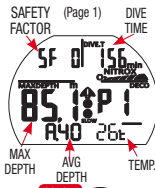

FREE (APNEA MODE)

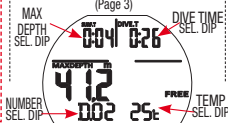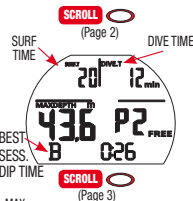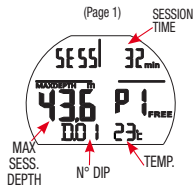

GAGE (GAGE MODE)

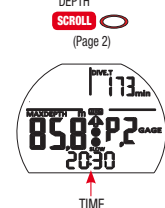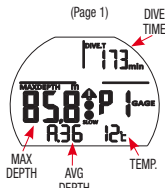


PRE DIVE MENU


AIR




NITROX

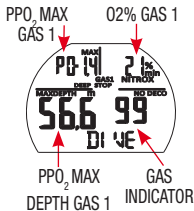

FREE

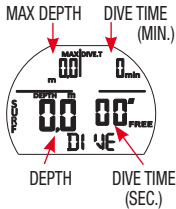


GAGE

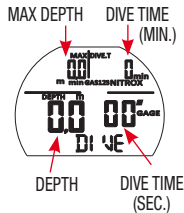

THE SCREEN SCROLL AUTOMATICALLY EVERY SECOND


(Page 2)

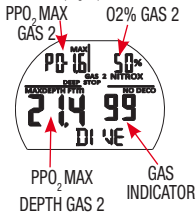

ONLY FOR MICHELANGELO

DIVE MENU


AIR

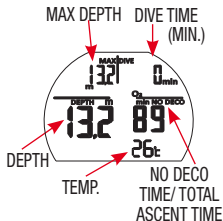


SCROLL

(Page 2)

PPO₂ MAX /
PPO₂ DEPTH MAX MODE

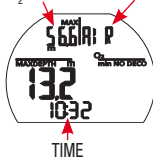


NITROX

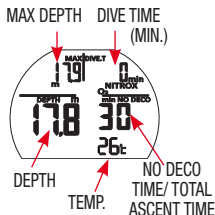


SCROLL

(Page 2)

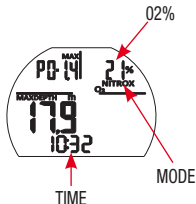


NITROX GAS SWITCH

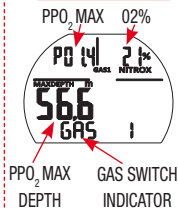

ENTER


(Page 2)

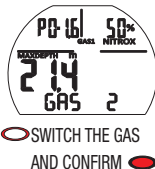

○ SWITCH THE GAS
AND CONFIRM ●

ONLY FOR MICHELANGELO


FREE

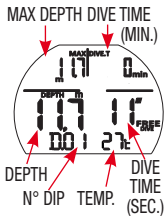


SCROLL

(Page 2)


SESSION TIME

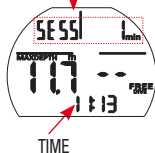

GAGE

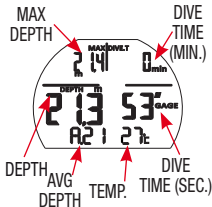


SCROLL

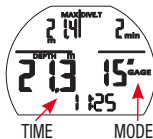


POST DIVE

AIR

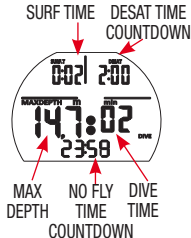

NITROX

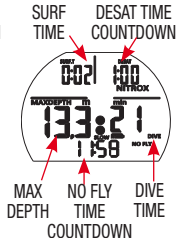


SWITCH OFF
AUTOMATICALLY IN 10 MIN.

SURFACE


FREE

MAX DEPTH DIVE TIME
(MIN.)

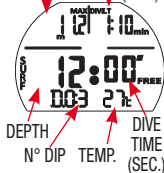

SCROLL TWO TIMES

TO END THE SESSION
(SURFACE)



SCROLL



YES / NO

and confirm



BATTERY



LOW BATTERY
(YOU SHOULD CHANGE THE BATTERY SOON)



YOU MUST CHANGE THE
BATTERY
(DIVE FUNCTION IS DISABLED)

Note: _____



Via G. Adamoli, 501 - 16165 GENOVA - ITALY
TEL. +39 010 830.79.1 - FAX +39 010 830.79.220
info@cressi-sub.it - www.cressi.com

